


Assembly Instructions

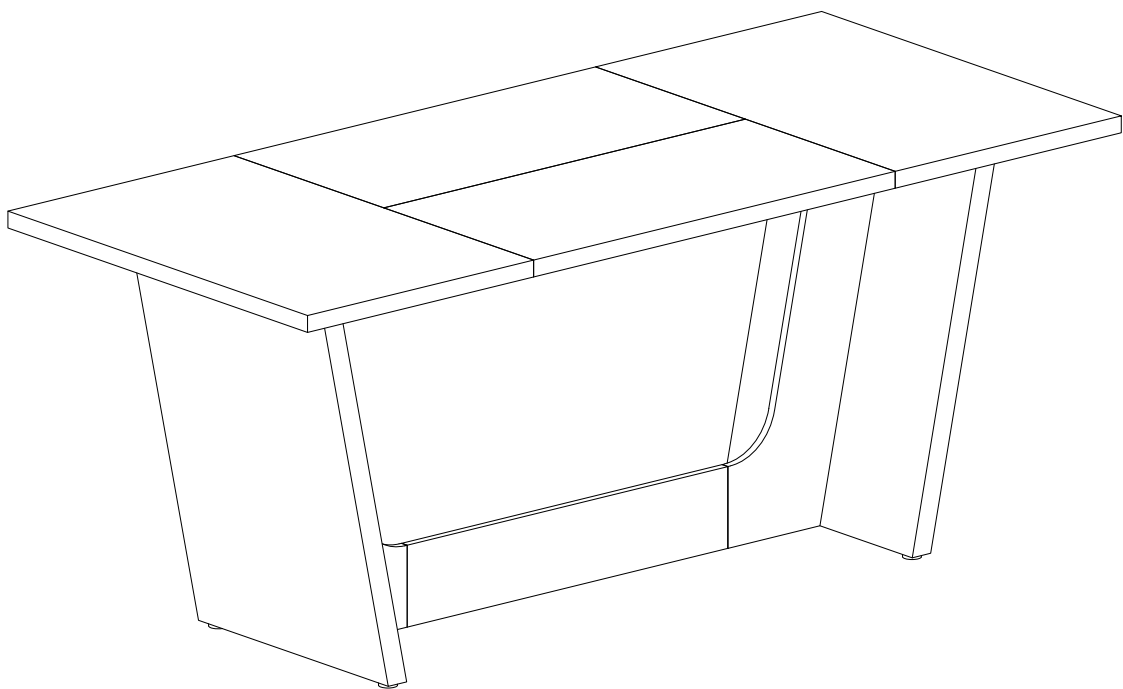

Conference Table

Model No.
HOGA-JW0716/ HOGA-JW0903
HOGA-JW1045

Contact Us




We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.


Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

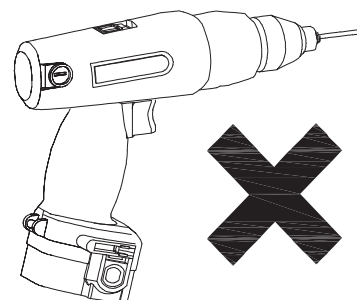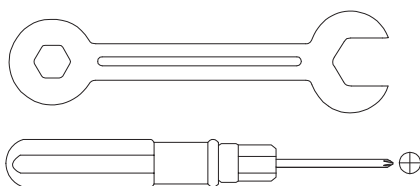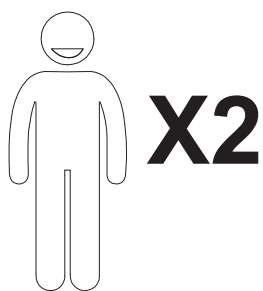



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

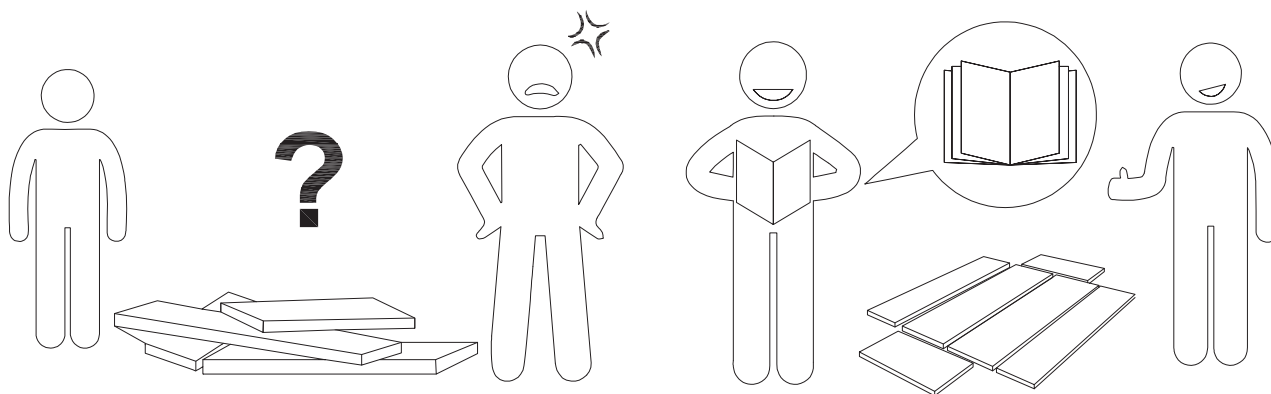

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

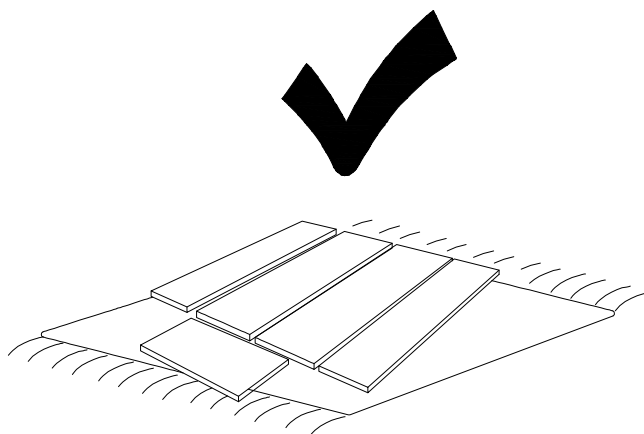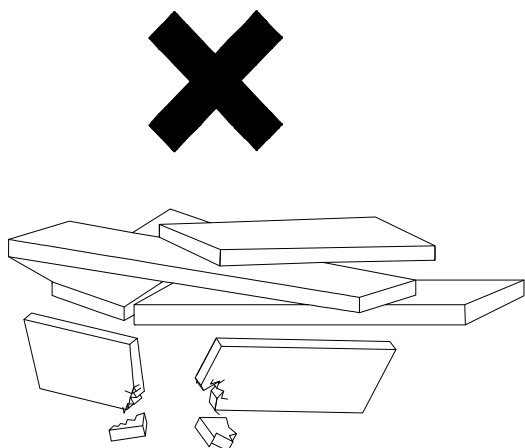


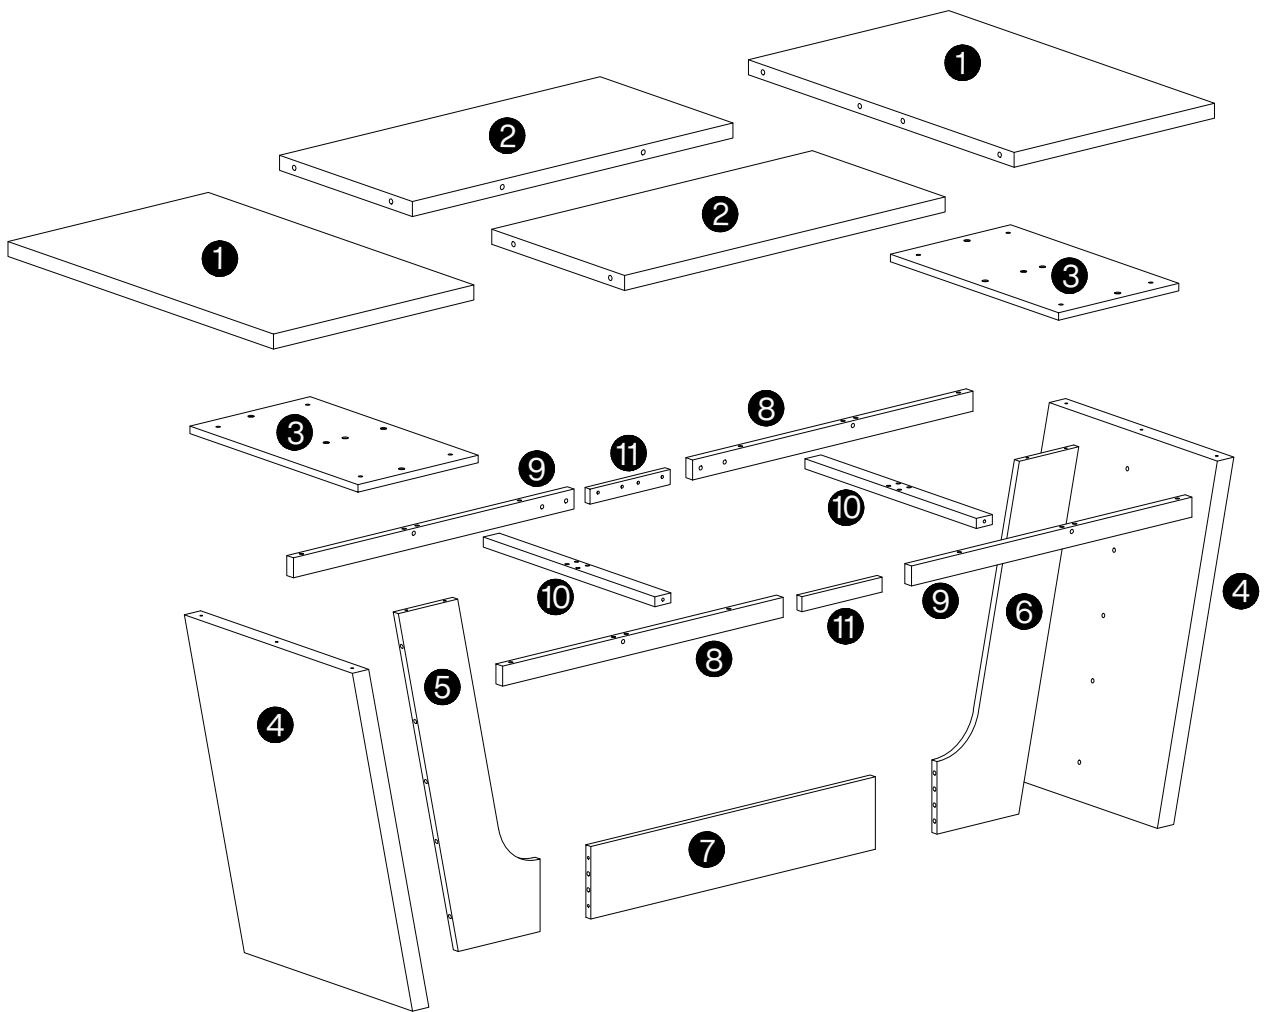


⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


Parts List




1 2 pcs



2 2 pcs



3 2 pcs




4 2 pcs




5 1 pc




6 1 pc

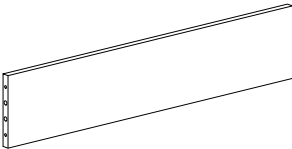

7 1 pc



8 2 pcs



9 2 pcs







10 2 pcs




11 2 pcs

Hardware List


A	X10+1	B	X10+1	C	X8+1	D	X10+1	E	X10+1	F	X1	G	X16+1
													
Ø6X35 mm		Ø15X12 mm		Ø8X30 mm		Ø10X50 mm		Ø7X47 mm		M4X55 mm		M6X12 mm	

H	X8+1	I	X8+1	J	X4+1	K	X16+1	L	X4	M	X2
											
M6X30 mm		M6X35 mm		M6X40 mm		M6X55 mm		M6XØ30 mm		Ø20 mm	

1

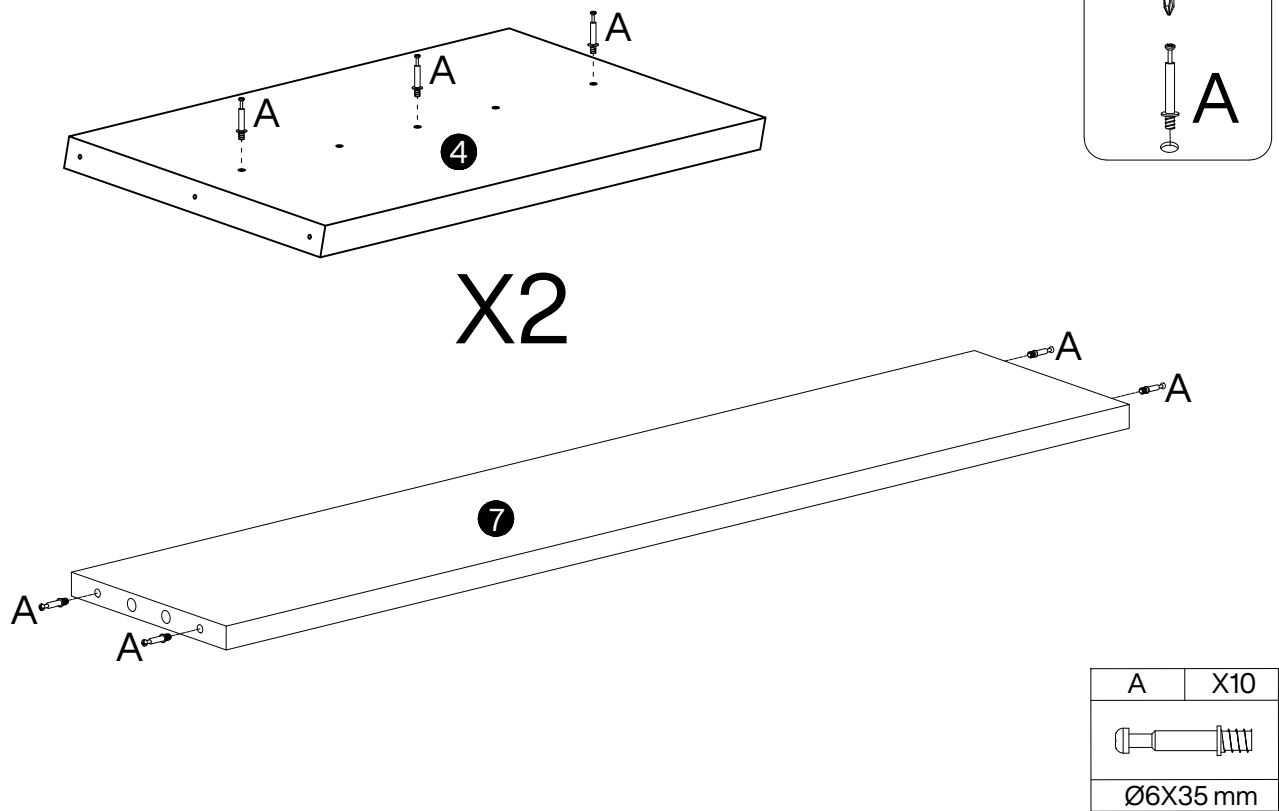

2

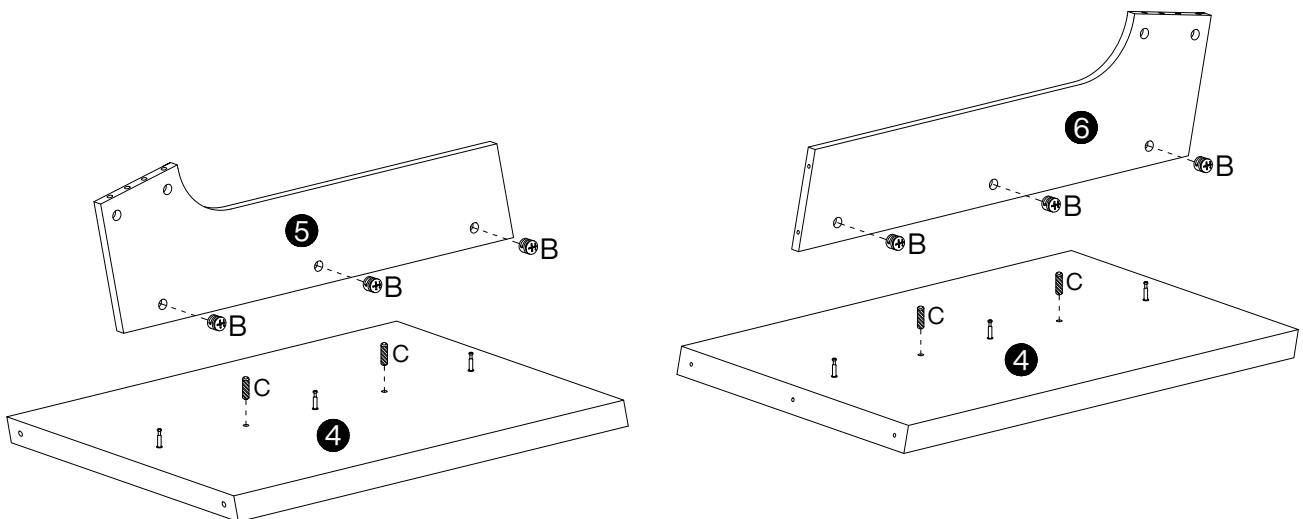


B	X6	C	X4
			
Ø15X12 mm		Ø8X30 mm	

3

screw down 



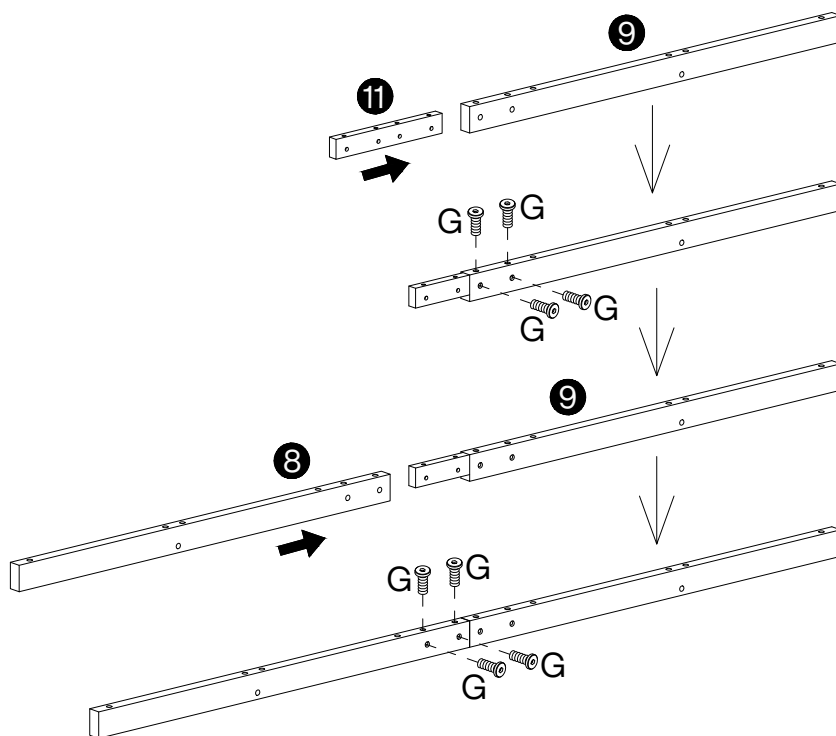


X2

G	X16
	
M6X12 mm	

4


pre-drill 70% 



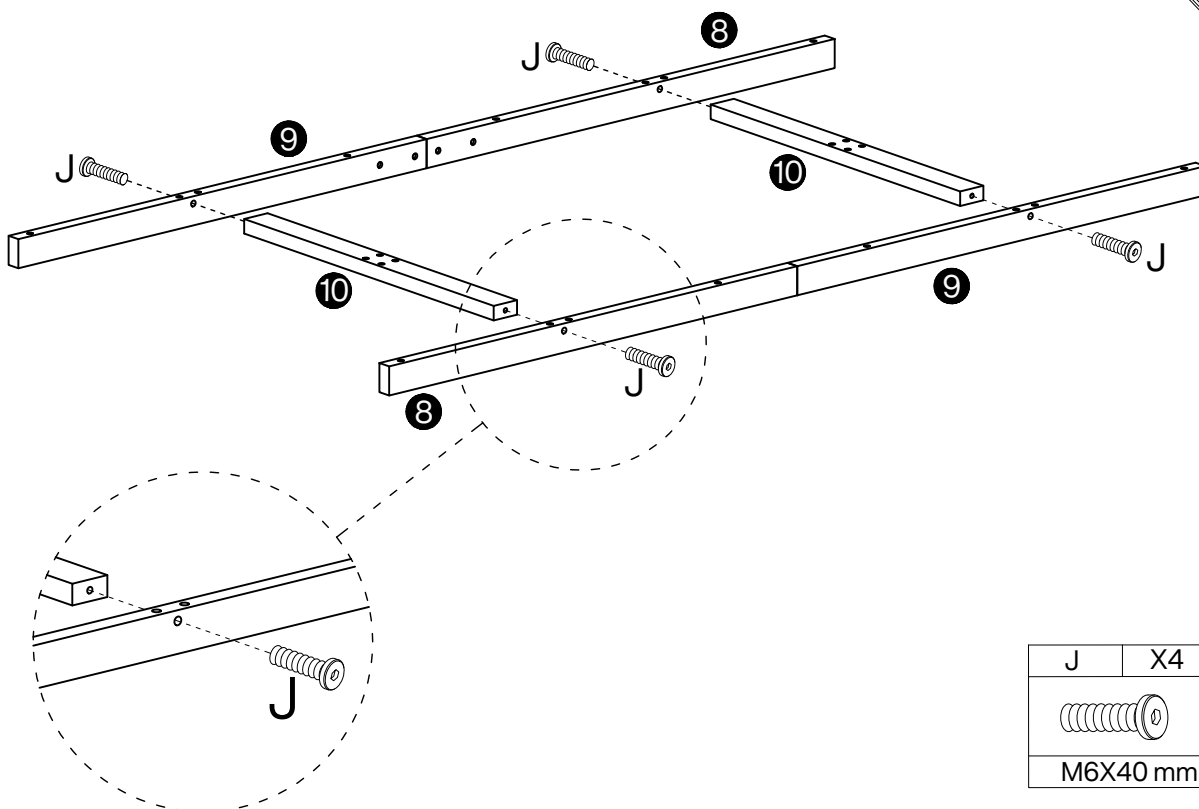

J	X4
	
M6X40 mm	



5


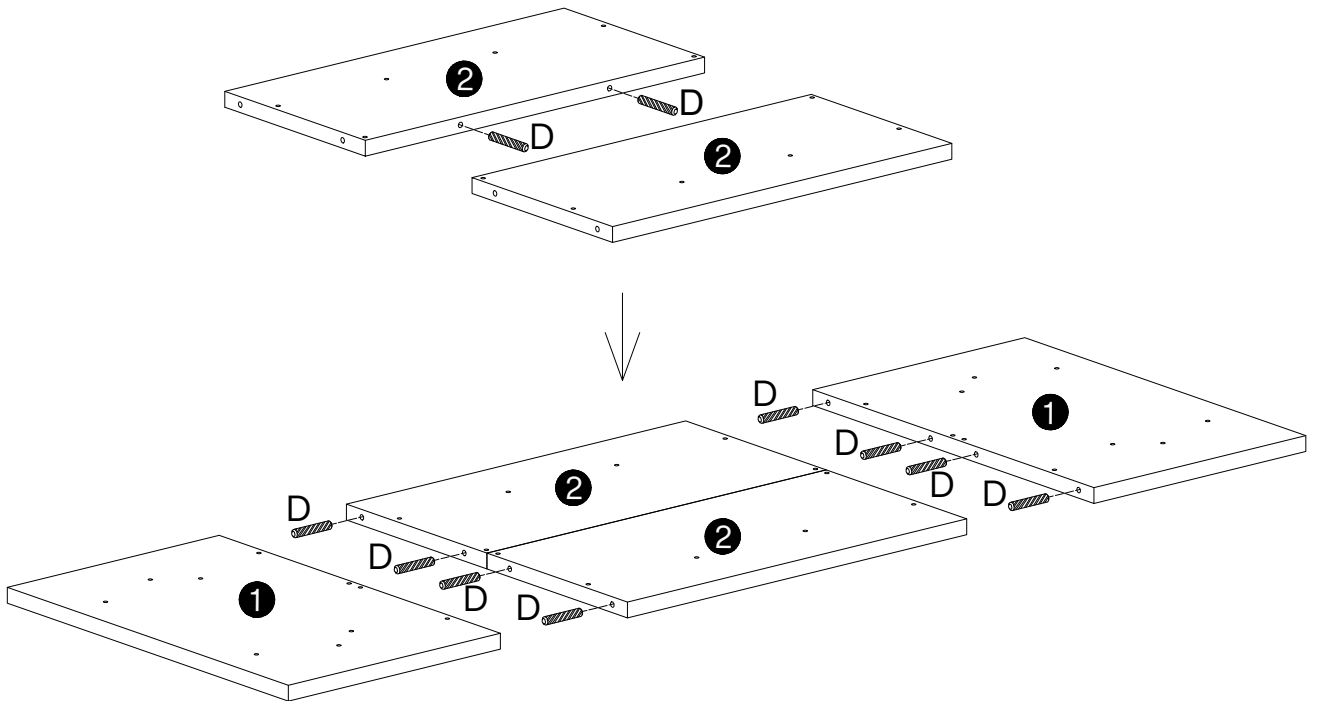


D	X10
	
Ø10X50 mm	


6


screw down

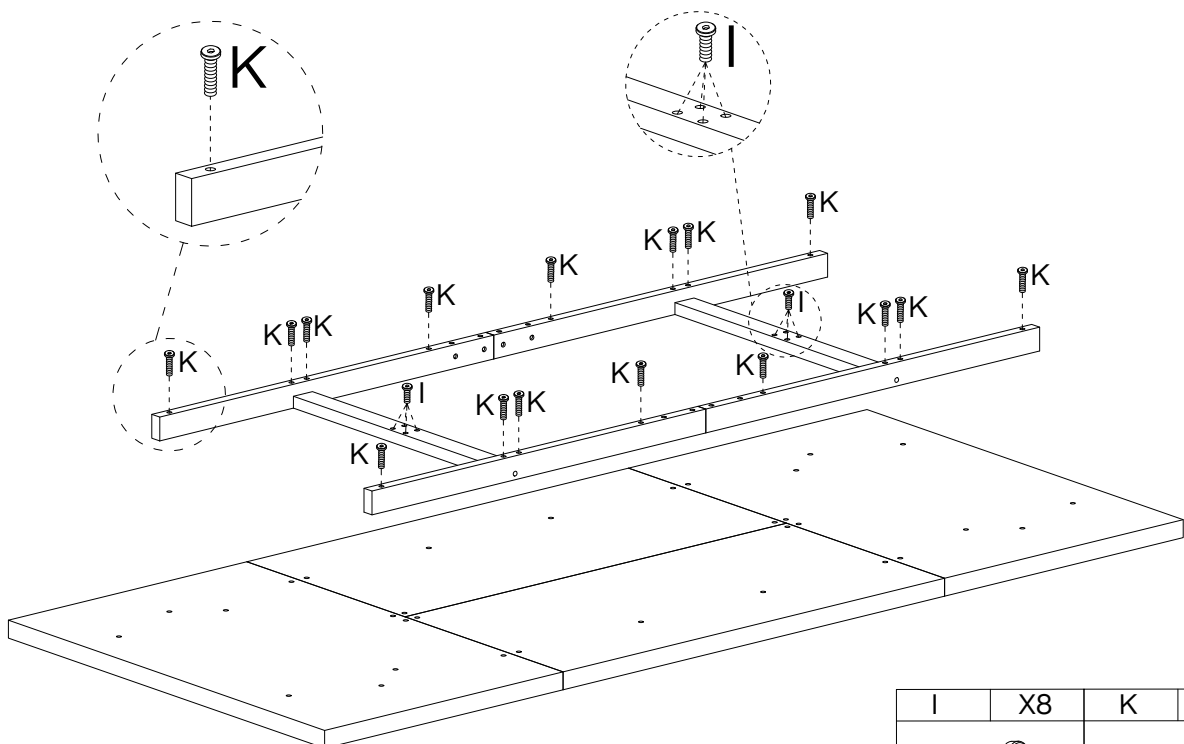


I	X8	K	X16
			
M6X35 mm		M6X55 mm	

7

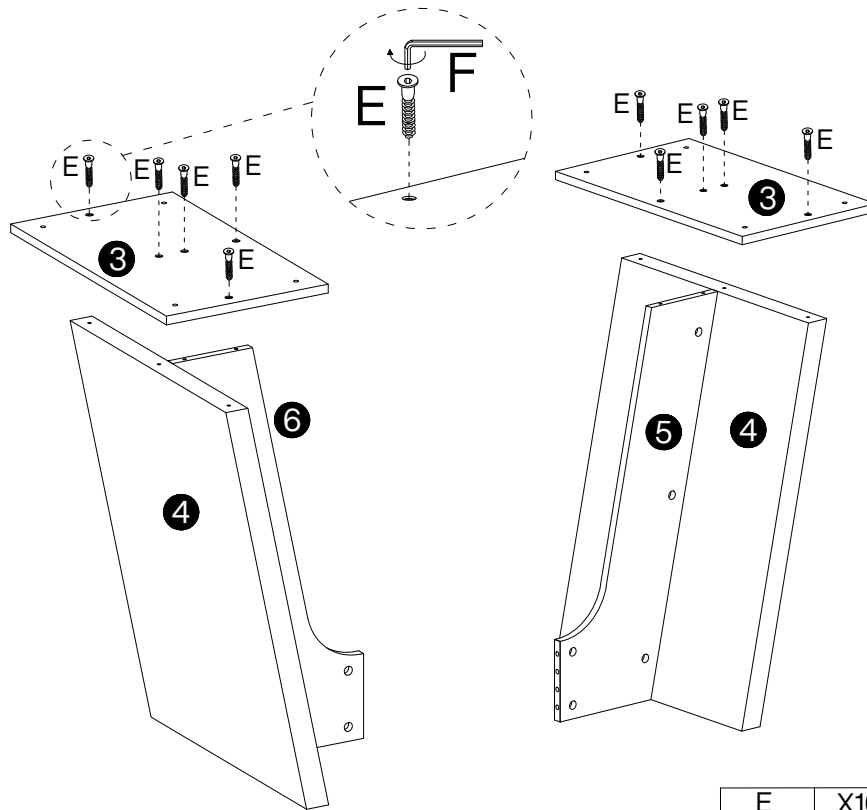

E	X10	F	X1
			
Ø7X47 mm		M4X55 mm	



8

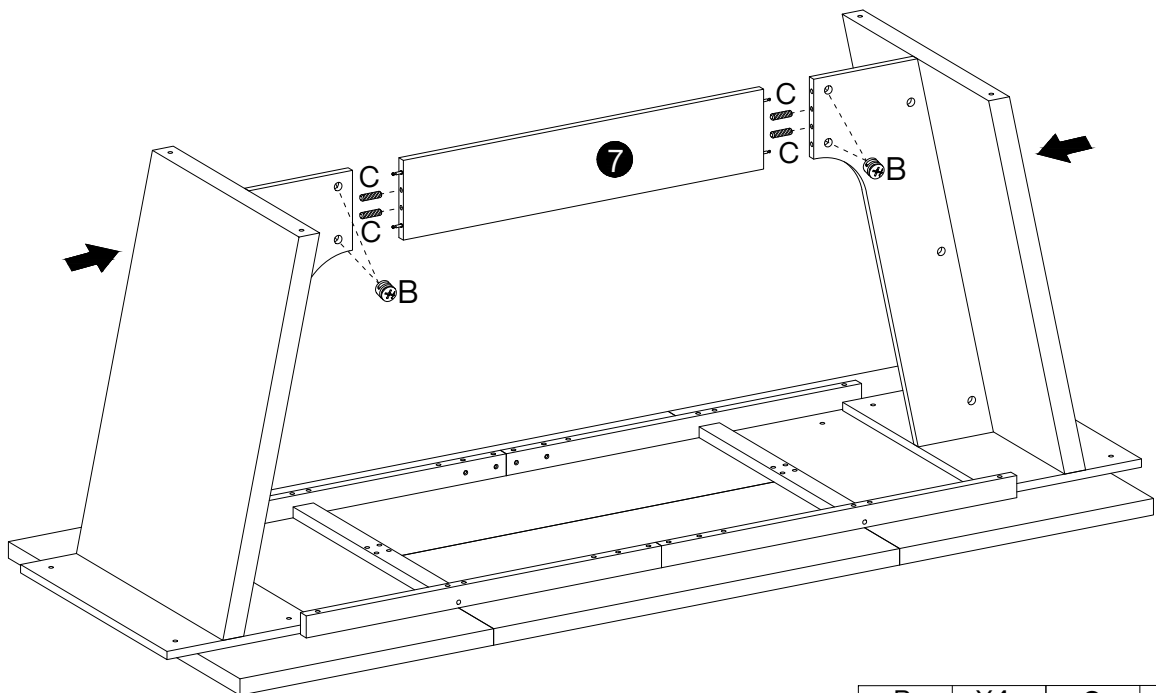

B	X4	C	X4
			
Ø15X12 mm		Ø8X30 mm	


9

screw down 

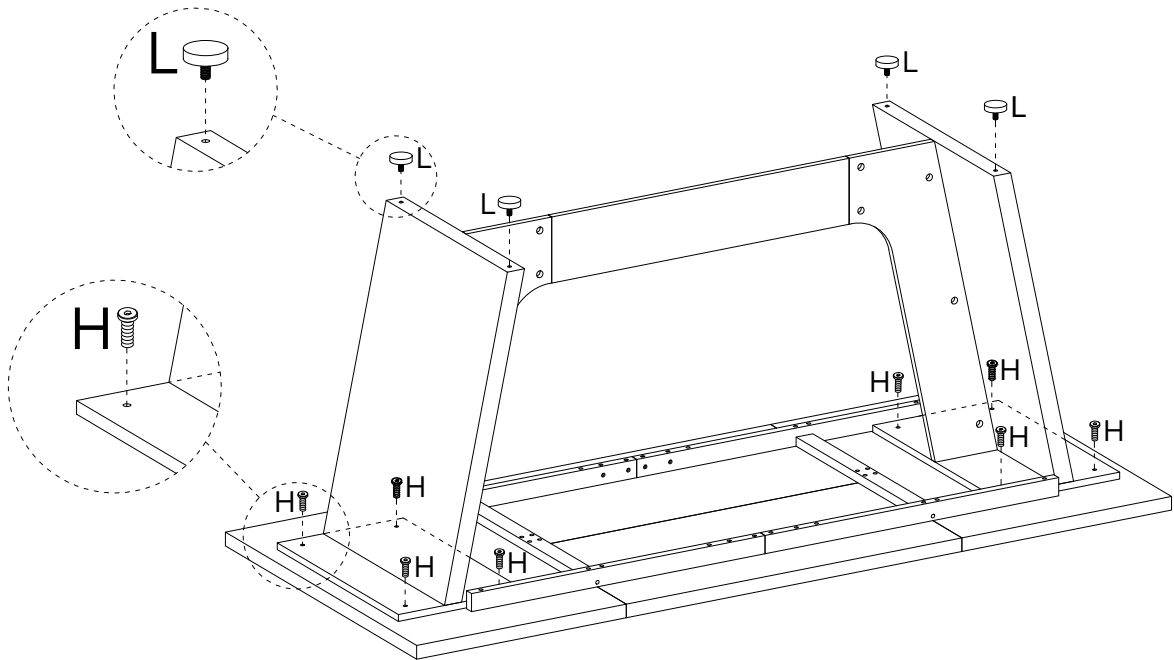

H	X8	L	X4
			
M6X30 mm		M6XØ30 mm	

10

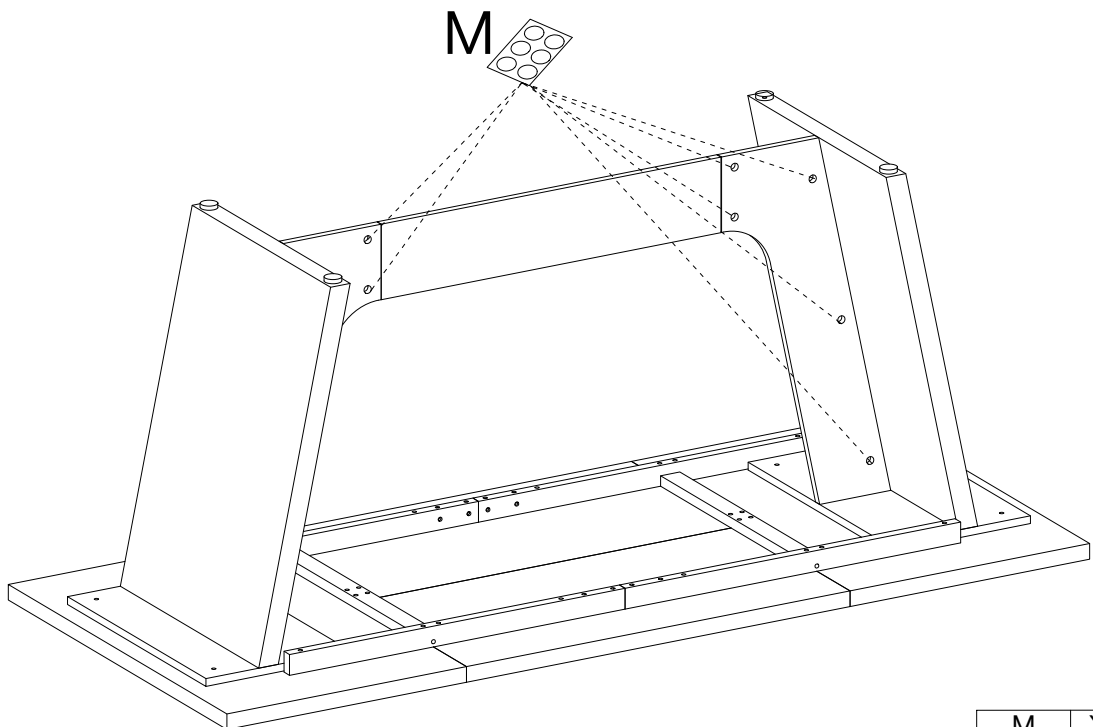

M	X2
	
Ø20 mm	

Thank you for your support!

